




HOW TO MEASURE CAPS & BOTTLES

CAP SIZE

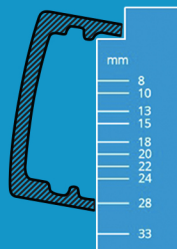

Place gauge across underside of cap with notch flush against inner wall. Read to opposite inner wall of cap.

BOTTLE NECK FINISH

Place gauge across finish with hook tight against thread. Read to outer edge of thread on opposite side of finish.

